

# Econo-X Portable Banner Stand Instructions



## Step 1:

Extend each of the support arms until they click into place.



## Step 2:

Extend the center tripod support until it clicks into place. The tripod support leg doesn't lock into one position, so it can move over a range of positions.



## Step 3:

Unroll your banner and put the top corner grommets over the hooks on the top two support arms. You may need to bend the support poles to get them to reach. Then put the bottom corner grommets over the hooks on the bottom support arms.



You can change the angle of the banner by adjusting the position of the tripod support leg.

