

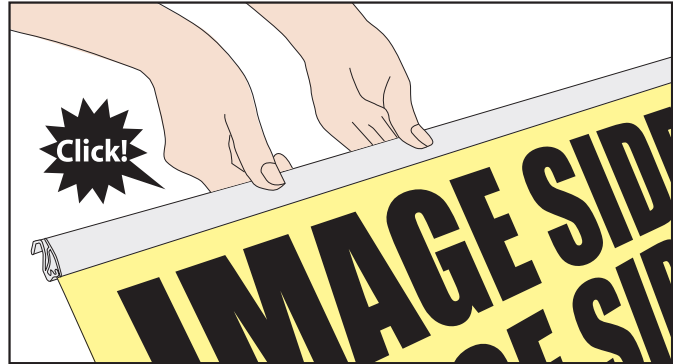
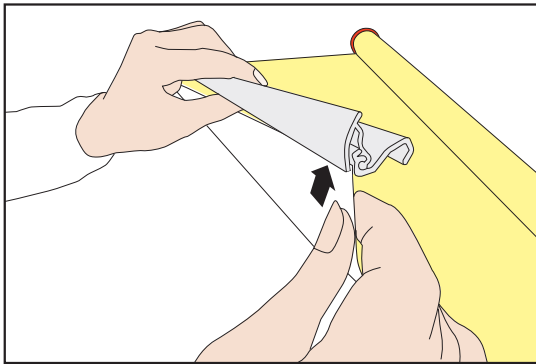


# Graphic Installation Expand M2

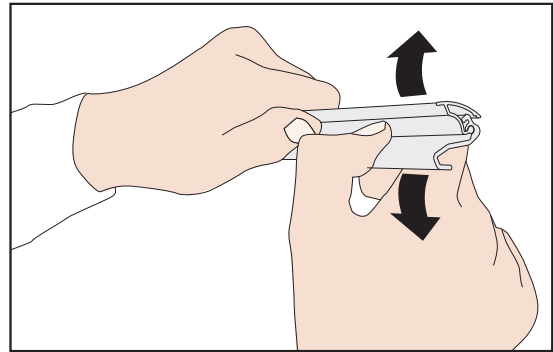

1. **IMPORTANT!** Media roll should be tightly wound.
2. Connect left side of media roll to the red knob.
3. Lower right side of media roll to let metal pin slide into locking slot.
4. Lock media tube by pushing the metal tab inwards.
5. Close the front section.

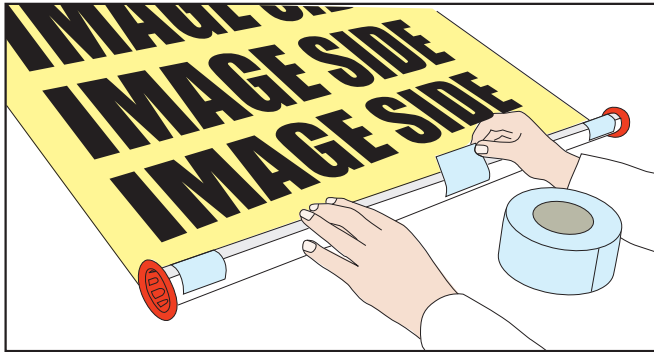